

BW28A USER MANUAL

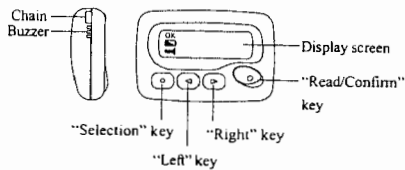 
85-S00B-004101

Contents



- I. Pager Diagram 1**
- II. Symbols Illustration 1**
- III. Guide to Operation 1**
 - 1. Selecting Menus 1
 - 2. Reading Private Messages 2
 - 3. Protecting or Deleting 3
Messages
 - 4. Reading Messages in the Dark 4
 - 5. New and Unread Messages 4
 - 6. Power Management 5
 - 7. Reading Public Messages 6
 - 8. Function Setting 7
 - 8.1 Adjusting the Real -Time 7
Clock
 - 8.2 Choosing Audio or 7
Vibration Alert

- 8.3 Setting the Real-Time 8
Alarm
- 8.4 Adjusting the LCD 8
Contrast
- 8.5 Switching the Pager Off 9
- 9. Changing Battery 9
- IV. Specifications 10**
- V. Precautions 12**

I. Pager Diagram



II. Symbols Illustration

- OK Receiving Range Display
-  Low Battery Indication
-  Sound Alert Display

III. Guide to Operation

1. Selecting Menus

Use the [SELECT] key to cycle through the four main menus : (1) the greeting menu which appears upon power up, the top line of which

1

prints the name of the paging service provider while the bottom line prints the current time and date; (2) & (3) the public message menu, list of public messages available; (4) the utilities menu.

 
 
 
2. Reading Private Messages

Press the [READ] key while at greeting menu. The first message is the most recent message received. Press [READ] again to read the whole message and other earlier messages. You may also use the [LEFT] and [RIGHT] key to navigate through the messages. At the end of every message the receiving time and date are appended along-side the call tone ("A", "B", "C", or "D") whose use is assigned by the paging service provider. To save memory, messages with the same content but with different call tone (i.e. "repeated call") will be

 
2

stored as one message with a reminder tag appended.

3. Protecting or Deleting Messages

Private messages can be deleted to free the memory space they occupy. Important messages can be protected to avoid accidental deletion. Use the [READ]/[LEFT]/[RIGHT] key to locate the message to be protected / deleted and then press the [SELECT] key. Three options are available : (1) to protect () the message; (2) to delete () the message; (3) to delete all () messages. Use the [LEFT] / [RIGHT] key to choose an option and then the [READ] key to confirm or the [SELECT] key to exit without choosing any option. When the dangerous delete-all option is chosen the user will be asked to confirm again. When a message is protected,

3

it will be placed at the end of the message queue for ease of searching and it may be unprotected () by first locating the message and then pressing the [SELECT] and [READ] key. When a message is unprotected, it will be placed at the front of protected message.

4. Reading Messages in the Dark

The pager provides a backlight for reading messages in the dark. At any screen when the pager is on holding the [SELECT] key for two seconds will turn the backlight on. The backlight will remain on until no key is pressed for a while. The user may turn off the backlight explicitly by holding the [SELECT] key for another two seconds.

5. New and Unread Messages

A message is regarded as unread if the user

4

does not press any key when it is just received. The sequence number for unread messages will be marked in reverse video mode. (Do not confuse with message content received with error which is also marked in reverse video.) When a message just arrives, it is displayed and the pager will give an alert tone. The alert can be stopped by pressing any key. If it is not stopped for about four seconds the alert loudness will escalate and the tone will last for four more seconds. (N.B. When a new message arrives and the memory is full, the last unprotected message will be squeezed out to make room for the new one.)

6. Power Management

To save power, the LCD screen will be powered off automatically if the pager does not detect key activities for about 20 seconds. In this power saving mode the pager is still

5

broadcast public messages and the number they do is entirely at their discretion.

8. Function Setting

8.1 Adjusting the Real-Time Clock

Use the [SELECT] key to go to the utilities menu and then choose the clock option (🕒) using the [LEFT] / [RIGHT] and then the [READ] key. The user may change the hour, minute, time format (AM / FM or military), month, day and year in sequence. Use the [RIGHT] key to increase the fields and the [LEFT] key to decrease. [READ] key to sequence through the various fields and exit without change by pressing [SELECT].

8.2 Choosing Audio or Vibration Alert

Use the [SELECT] key to go to the utilities menu and then choose the alert option using [LEFT] / [RIGHT] and then [READ] to toggle

7

able to receive messages as usual. If a new message arrives, the screen will be turned on automatically and the message will be displayed. The user may also turn on the screen explicitly by pressing any key.

7. Reading Public Messages

Press the [SELECT] key while at greeting menu to go to the public message menu and then use the [LEFT] / [RIGHT] key to choose the expected item, press the [READ] key at last. Press [READ] again to read the whole message and other messages down. The user may also use the [LEFT] and [RIGHT] key to navigate through the messages. At the end of every message the receiving time and date are appended. Public messages may not be protected or deleted. Note that the paging service provider may or, may not

6

between the audio (🔊) and vibration (📳) mode.

8.3 Setting the Real-Time Alarm

Use the [SELECT] key to go to the utilities menu and then choose the alarm option (🔔) using the [LEFT] / [RIGHT] and then the [READ] key. The user may change the alarm on / off, hour, minute and time format (AM / PM or military). Use the [RIGHT] key to increase the field and the [LEFT] key to decrease. Use [READ] key to sequence through the various fields and exit without change by pressing [SELECT]. When the alarm is activated, a bell icon will appear at the bottom right corner of the greeting screen.

8.4 Adjusting the LCD Contrast

Use the [SELECT] key to go to the utilities

8

menu and then choose the contrast option (Ⓢ) using the [LEFT] / [RIGHT] and then the [READ] key. Adjust to the desired contrast using the [LEFT] / [RIGHT] key and complete by pressing [READ].

8.5 Switching the Pager off

Use the [SELECT] key to go to the utilities menu and then choose the power-off option (Ⓢ) using the [LEFT] / [RIGHT] key and then confirm by pressing the [READ] key. Unlike the power-saving mode, the pager will not receive any message when it is switched off this way. Press the [READ] key for one second to turn on the pager again.

9. Changing Battery

When the battery icon is shown and the "Change Battery" notice is given, the

9

battery almost runs out. Change a new battery by switching off the pager, releasing the battery door lock, opening the battery door, removing the old battery, replacing with the new one, closing the battery door, and then locking it. The messages will be kept for half an hour when the battery is removed.

IV. Specifications

Display : 20 x 4 English
Storage : 26K English characters
Battery : 1 x AAA alkaline
Weight : 65g with battery
Private messages : 60 (30 of which protectable)
Public messages : 100 maximum
Typical battery life : 30 days without switching off
Dimensions : 75 x 51 x 18 mm

10

V. Precautions

1. Avoid humidity. Never let water or other liquid gets into the unit.
2. Do not place the unit under direct sunlight or near heat.
3. Do not repair the unit yourself.
4. Prevent the unit from falling down on the ground, bending or strong impact.
5. Do not apply strong cleaning agents to clean the unit.
6. Do not touch the screen with sharp-headed object.

All upgrade editions are subject to change without any further notice. We apologize that there may be some minor differences between the contents stated in User's Manual and the actual operations of the product.