

USER'S GUIDE

Pronto™
Pronto FLX™

Contents

	Page
Introduction	1
Controls	2
Turning Your Pager On	3
Turning Your Pager Off	3
Receiving and Reading Messages	3
Turning the Light On and Off	4
Changing Alert Modes	5
Setting the Time on Your Pronto Pager	5
Setting the Time on Your Pronto FLX Pager	6
Saving Messages	6
Erasing Messages	7
Effective Use of Your Pager	7
Battery Information	8
Features	9
Cleaning Your Pager	10
Repair and Maintenance	10
Patent Information	11



Introduction

Congratulations on purchasing either a Pronto or Pronto FLX pager by Motorola®. This compact pager uses many advances in electronic and wireless technology which allow you to receive numeric messages instantly and affordably.

 
The Pronto FLX pager uses the latest in paging technology – FLEX™ TECHNOLOGY. This technological advance extends battery life up to five times longer than ordinary pagers. As a Motorola FLEX pager user, you can feel more confident in receiving your pages because FLEX technology improves the ability to receive pages. FLEX technology has been developed by Motorola, the leader in paging innovation and quality.

Controls

Buttons

- On/Read/Select – turn pager on, read incoming messages, and select the function displayed.
- Menu – scroll through the menu.

After performing any pager function described in this user's guide (setting the time, or changing the alert mode), your pager automatically returns to the stand-by screen and activates the selections you made.

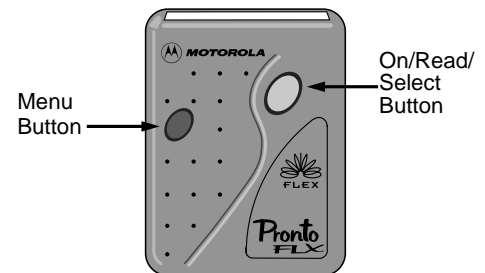

Function Indicators

- ◀ Audible Alert – a beep tone sounds for incoming messages.
- 🔒 Message Lock – this message is saved, or locked against deletion.
- ▶ Continuous Message – more message information is on the next screen.
- ∇ Out of Range - if this option is enabled, this indicator displays whenever the pager is out of range of the paging transmitter. As long as the out of range symbol is displayed, you will be unable to receive any pages.

Turning Your Pager On

Press **⓪** to turn your pager on.

Your pager gives an alert by either a sound or a vibration, indicating it is on. After displaying the power-up screen, the time of day and an alert indicator (if in the audible mode) are shown on the standby screen.

Turning Your Pager Off

- 1 From the standby screen press and release **⓪** until **OFF P** is displayed.
- 2 Press **⓪** to turn your pager off.

Receiving and Reading Messages

Your pager can receive up to 16 numeric messages. When a message is received, the pager alerts for eight seconds.

 
- 1 Press any button to stop the alert.
- 2 Press **⓪** to display the message.
- 3 Press **⓪** twice while reading your message to display **ESCAPE P**.
- 4 Press **⓪** to return to the standby screen.

Messages longer than 12 characters display on a second screen, indicated by the **▶** symbol. Press **⓪** to display the second screen. The second screen displays automatically after 12 seconds, even if **⓪** is not pressed.

The last screen of your message displays the message slot number and the time received.



3

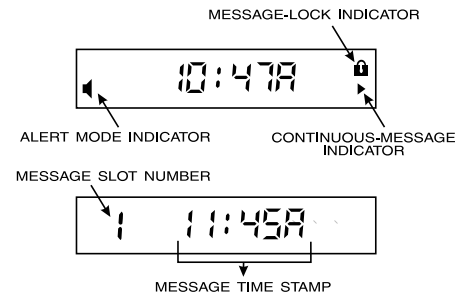

If a message is not read, the pager gives a reminder alert every two minutes and the screen displays the number of unread messages (for example, 1 PAGE, 2 PAGES) until all messages are read.

An overflow condition occurs when all message slots are filled with unread messages and a new message is received. Upon receipt of a message, while the pager is in the overflow condition, the oldest, unlocked message is discarded. In this mode, the overflow indicator replaces the default idle display with **OVERFLOW**.

Messages must be read and erased to clear the overflow display.

Turning the Light On and Off

- 1 Press either button to turn the light on.
- 2 The light turns off automatically four seconds after returning to the standby screen.

4



Changing Alert Modes

- 1 From the standby screen, press **⓪** twice. Either **SILENT P** or **AUDIBLE P** is displayed, depending on the current mode.
- 2 If **AUDIBLE P** is displayed, then the pager is in the silent mode. Press **⓪** to change to the audible mode. The pager chirps and **▶** is shown in the bottom left corner.
- 3 If **SILENT P** is displayed, the pager is in the audible mode. Press **⓪** to change to the silent mode. The pager vibrates.

For your pager to vibrate when a message is received, it must be in the silent mode.



5

Setting the Time on Your Pronto Pager

- 1 From the standby screen, press and release **⓪** until **SET TIME** is displayed.
- 2 Press **⓪** to set the time. The hour flashes.
- 3 Press and release **⓪** until the correct hour and **A** (for AM) or **P** (for PM) is displayed.
- 4 Press **⓪** to switch to the minutes. The first digit of the minutes flashes.
- 5 Press and release **⓪** to change the first minute digit. Press **⓪** to switch to the second digit. The second digit of the minutes flashes.
- 6 Press and release **⓪** to change the second minute digit.
- 7 Press **⓪** to accept the selection and return to the standby screen.

Setting the Time on Your Pronto FLX Pager

- 1 From the standby screen, press and release **⓪** until **SET TIME** is displayed.
- 2 Press **⓪** to set the time. The hour flashes.
- 3 Press **⓪** to change the hour. Continue pressing until the desired hour is displayed.
- 4 Press **⓪** to switch to the minutes. The first digit of the minutes flashes.
- 5 Press **⓪** to change the first minute digit. Press **⓪** to switch to the second digit. The second digit of the minutes flashes.
- 6 Press **⓪** to change the second minute digit.
- 7 Press **⓪** to switch to the **A** or **P**. The **A** or **P** flashes.
- 8 Press **⓪** to change between **A** and **P**.
- 9 Press **⓪** to accept the selection and return to the standby screen.

6



Saving Messages

- 1 To save a message, press **⓪** while reading your message. The prompt **PRGTE** is displayed.
- 2 Press **⓪** to protect the message.
A **■** indicates your message is saved.
- 3 Press **⓪** while reading the saved message to remove the protection. The prompt **UNPRGTE** is displayed.
- 4 Press **⓪** to remove the protection.

The **■** is removed from the screen.

Saved messages cannot be erased or overwritten by new messages when the memory is full. You can save up to five messages on your Pronto pager or up to eight messages on your Pronto FLX pager.

Erasing Messages

- 1 Press and release **⓪** until **ERASE ALL** is displayed.
- 2 Press **⓪**. All read, unprotected messages are erased. The pager returns to the standby screen.

The **ERASE ALL** prompt is displayed only if there are read messages in memory.



7

Effective Use of Your Pager

Your pager can help you keep in contact with everyone important to you . . . your children or child care providers, business associates, data services, and voice mail. Be sure that your children's school, physician, and friends have the number to contact you in emergencies.

Give your pager number to family, friends, and associates to assure contact at any time, any place. When they call your pager number, they enter the number where they can be reached on a tone-type telephone. This number is then displayed on your pager.

If you have a cellular phone, give your pager number instead of your cellular number. Then you can decide who to call back, without paying for incoming cellular calls. Your pager can help reduce your monthly cellular phone bill!

 
Include your pager number on your business cards and on your answering machine or voice mail message.



8

Battery Information

Your Pronto or Pronto FLX pager is designed to operate with an AAA-size alkaline battery. See the diagram for battery replacement.

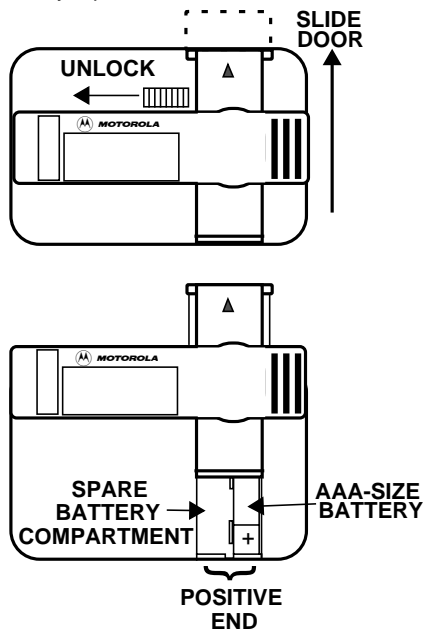

9

Features

Backlight: In low-light conditions, the backlight makes the screen easy to read.

Duplicate Messages: If the same message is received more than once, **DUPLE** is displayed at the beginning of the latest message. This message contains the latest timestamp and prevents a repeated message from taking an extra memory slot.

Low Battery Indicator: When battery power reaches low levels, **LOW BATTERY** is displayed, prompting you to change the battery. All pager alerts change to two seconds in length.

Message Erase: Messages can be erased to free space in memory.

Memory Retention: All messages remain in memory even when the pager is off. Messages are not retained when the battery is changed.

Memory Capacity: The Pronto pager can store up to eight 20-character messages or sixteen 10-character messages, for a total of 160 characters. The Pronto FLX pager can store up to sixteen 20-character messages, for a total of 320 characters.

Message Protect: You can protect up to eight messages stored in the pager memory.

Overflow: **OVERFLOW** is displayed when more unread messages are received than the available message memory can hold. After you read all of your unread messages, the standby screen is displayed.

Reminder Alert: The pager chirps or vibrates every two minutes until you read all unread messages.

Time of Day on Standby Screen: The standby screen displays the time of day when the pager is on.



10

Group Call: This feature permits a group of pagers to receive the same message at the same time. The group identifier and source identification precede a group call message.

Tone Only Pages: When a message is received that does not contain numeric data TONE ONLY is displayed.

Timestamp: The time of day a message is received is displayed on the last screen of each message.

Reserve Battery Compartment: The battery compartment accommodates a spare battery to make changing the battery quick and easy.

Out of Range: If your pager is equipped with this feature, *and* if you are outside the coverage area of your paging transmitter, the ∇ symbol displays to inform you that you are out of range. As long as the out of range symbol is displayed, you will be unable to receive any pages.

Cleaning Your Pager

To clean the pager housing, use a soft, nonabrasive cloth moistened in a mild soap and water solution. Wipe the surface using a second cloth moistened in clean water. **Do not place in water. Do not use alcohol or other cleaning solutions.**



Repair and Maintenance

Your Pronto or Pronto FLX pager, properly handled, is capable of many years of trouble-free service. However, if service is required, Motorola's Service Organization, staffed with specially trained technicians, offers conveniently located repair and maintenance facilities throughout the country. Please contact your paging service representative or a Motorola sales office for more information.

Patent Information

This Motorola product is manufactured under one or more Motorola U.S. patents. A partial listing of these patents is provided on the underside of the belt clip and on the inside surface of the back cover of the product. Other U.S. Patents covering this product are pending.



NOTES



Ⓜ, Motorola, Pronto, Pronto FLX, FLEX, and  are trademarks or registered trademarks of Motorola, Inc.

© 1996 by Motorola, Inc.
All Rights Reserved.

Paging Products Group
1500 Gateway Blvd.,
Boynton Beach, FL 33426-8292

Printed in U.S.A. 10/96



6881028B70-O

