

USER'S MANUAL



FLEX Numeric Pager

SUN TELECOM
INTERNATIONAL

1. FEATURES	4
2. BUTTONS	5
3. ICONS AND DESCRIPTIONS	6
4. TURNING PAGER ON	7
5. TURNING PAGER OFF	8
6. RECEIVING AND READING MESSAGES	9
7. LOCKING AND UNLOCKING MESSAGES	10
8. MEMORY	11
9. LOW BATTERY INDICATOR	12
10. CHANGING THE BATTERY	12
11. DUPLICATE MESSAGES	13
12. DELETING INDIVIDUAL MESSAGES	14
13. DELETING ALL MESSAGES	15
14. CHANGING ALERT STATUS	16
15. ALARM	17
16. TIME AND DATE	18
17. LIGHT	19
18. SET VIBRATION/AUDIBLE ALERT	20

 
- ▶ 30 message memories
- ▶ 14 locked messages
- ▶ Date & time display
- ▶ Message full indication
- ▶ Vibrate / Chirp / Silent
- ▶ Selective erase
- ▶ Unread message indicator
- ▶ Reflective backlighting
- ▶ Time display when power off
- ▶ Power Up Logo(Optional)
- ▶ User selectable 8 melodies alert & 4 beep tone
- ▶ Receiving time stamping
- ▶ Alarm
- ▶ Erase all
- ▶ Duplicate message indication
- ▶ Memory retention when power off
- ▶ Low battery alarm
- ▶ Source Display(Optional)

(Specifications are subject to change without prior notice)


FEATURES

- : Alert (Beep) On
- : Alert (Melody) On
- : Alert (Vibrate) On
- : Alarm On
- : Message Lock
- : Duplicate Message
- : New Unreaded message
- : Change Battery
- : Message longer than 12 Char


ICONS AND DESCRIPTIONS



 Press the Function button to enter the Function mode
Press the Function button four times until "POWER OFF?" is displayed on the screen.




 Press Read button to enter Pager Off mode.




- FUNCTION BUTTON**
 - Turn pager on
 - Enter Function mode
 - Complete setting process in each function
- LAMP BUTTON**
 - Turn the light On or Off
 - Escape to the standby screen, which shows time, date, alarm status, and alert status.
 - Press twice to escape to the standby screen
- READ BUTTON**
 - Read messages
 - Select setting and features in Function mode
 - Turn pager On

 BUTTONS



< Power off mode >

 

< Stand by screen >

 
Press and hold the Read button or Function button for 2seconds while pager is in the Off mode. Time and date will appear on the bottom center of the screen.

Upon inserting a battery, pager will vibrate and beep briefly as it enters the normal reception mode.

If there are new unread messages, the **new** icon and the number of unread messages will displayed on the screen.


And if all the messages are read, the number of messages in memory will displayed.

TURNING PAGER ON



When a message is received, the selected Alert will be activated.

 
Press the Read button to stop the Alert and to read messages.



The following information will be displayed in the order of the newest to the oldest message:
Message number, time stamp and message.



 Reading messages with 13 Characters or more



messages with 13 or more characters will display "" at the top right corner of the screen.
Press the Read button to read the rest of the message

0 123456789

A maximum of 14 messages can be locked. Select a message to be locked and press the Function button.

LOCK ?

When "LOCK?" is displayed, press the Read button to lock the message. The Lock icon will be displayed, and the message will be locked.

0 123456789

To unlock messages, select the message to be unlocked and then press the Function button to display "UNLOCK?" on the screen.

UNLOCK ?

Press the Read button.

0 123456789

Locked messages will remain in memory even during low battery power, and while the battery is being changed.

Press the Lamp button twice to escape to the standby screen.

LOCKING AND UNLOCKING MESSAGES

MEMORY

Pager has the memory capacity to store 30 numeric messages, with a maximum of 20 characters per message.

07-04 10:12 A

When the battery capacity falls below the operational level, the Low Battery icon will be displayed and the voltage alarm tone will be activated.

0 1234567890 !

Duplicate Message Indicator will be displayed on the screen when the pager receives a message that is identical to a message in memory.

When changing the battery, you will need to lock all messages you want to save or they will be lost. (Refer to #7 Locking and Unlocking Messages.) When the battery is removed, you will lose the seconds of time that it takes you to replace the new AAA Battery. Warning! Replace battery in Non-Hazardous location only. Use only Duracell MN2400 & Energizer E92.

LOW BATTERY INDICATOR/CHANGING THE BATTERY

DUPLICATE MESSAGES

To Delete Individual Messages:

Deletion of All Messages:

After reading messages, enter into Function mode by pressing the Function button two times until "DELETE?" is displayed on the screen. Press Read button, message is deleted and another message is displayed.

Press the Function button to enter the Function mode. To display "DELETE ALL?" sign, press Function Button three times. On "DELETE ALL?" sign, press Read button to delete all message except locked messages and Unread messages.

To Delete a Locked Message:

It is necessary to convert the locked message into unlocked condition before the message can be deleted.

DELETING INDIVIDUAL MESSAGES

DELETING ALL MESSAGES

Press the Function button to enter the Function mode. Press the Function button five times until "SET ALERT?" is displayed on the screen. Press the Read button until the desired Alert is selected. Press the Function button to complete the process.

Press the Function button to enter the Function mode. Press the Function button six times until "SET ALARM?" is displayed on the screen. Press Read button to enter into Alarm-setting mode. To choose and set desired condition, press Read button toggle (Ex. YES NO). To move to each field (hour, minute, am/pm), press the Function button.

07-04 10:12 A

SET ALERT ?

BEEP 1234

MEL 12345678

UIBE CHIRP ?

SILENT ?

CHANGING ALERT STATUS

07-04 10:12 A

SET ALARM ?

YES 06:00A

ALARM

07-04 10:12A

DATE-TIME ?

2004

07-04 10:12A



Press the Function button to enter the Function mode. Press the Function button seven times until "DATE TIME?" indicator is displayed on the screen and press Read button.

Press the Read button to change the month, then press the Function button to move to the next field.

TIME AND DATE



amp button

Press  button to turn the light on.
Press  button again to turn the light off.

LIGHT

AUDIO ?

VIBRATION ?

You can select Vibration or Audible alert mode. At the stand-by screen, press the FUNCTION button to enter into the function menu mode.

Press the Read button to select the audible or vibration mode.

SET VIBRATION/ AUDIBLE ALERT