

# USER'S MANUAL

AN1000<sup>TM</sup>

FLEX Numeric Pager



V.2

# *AN1000*<sup>TM</sup>

Thank you for choosing the *AN1000* numeric pager.

This device incorporates the latest technology available to create a convenient and cost effective paging solution.

The *AN1000* enables you to stay in touch no matter where business or life takes you.

**SUN TELECOM**  
*INTERNATIONAL*

# CONTENTS

1. FEATURES .....	4
2. BUTTONS .....	5
3. ICONS AND DESCRIPTIONS .....	6
4. TURNING PAGER ON .....	7
5. TURNING PAGER OFF .....	8
6. RECEIVING AND READING MESSAGES .....	9
7. DUPLICATE MESSAGES .....	10
8. LOW BATTERY INDICATOR .....	10
9. LOCKING AND UNLOCKING MESSAGES .....	11
10. MEMORY .....	12
11. DELETING INDIVIDUAL MESSAGES .....	13
12. DELETING ALL MESSAGES .....	14
13. CHANGING ALERT STATUS .....	15
14. ALARM .....	16
15. TIME AND DATE .....	17
16. AUTOMATIC ON/OFF .....	18
17. BACKLIGHT .....	19
18. BATTERY INFORMATION .....	19

# 1.

# FEATURES

- ▶ 30 message slots
- ▶ 14 locked messages
- ▶ Date & time display
- ▶ Message full indication
- ▶ Vibe / Chirp / Silent(No alert) option
- ▶ Individual Message Delete
- ▶ Delete all Message
- ▶ Unread message indicator
- ▶ Backlight display
- ▶ Automatic On/Off
- ▶ Time display when power off
- ▶ 12 user selectable alerts
- ▶ Message Time Stamp
- ▶ Alarm
- ▶ Duplicate message indication
- ▶ Message retained during battery replacement
- ▶ Low battery alert

## 2.

## BUTTONS



Read button

Function button

### ▲ READ BUTTON

- Read messages.
- Select setting and features in Function.
- Turn pager on.

### ▼ FUNCTION BUTTON

- Enter Function mode.
- Turn the light on or off.

\* Press the Read Button and Function button simultaneously to escape to the main screen.

### 3.

## ICONS AND DESCRIPTIONS

 : Reception Area

 : Beep Alert On

 : Melody Alert On

 : Vibe Alert On

 : Alarm On

 : Automatic On/Off

 : Message Lock

 : Duplicate Message

*new* : New Unread Message

 : Low Battery

 : Message Continuation

## 4. TURNING PAGER ON

A rectangular screen display showing the word "OFF" on the left and "06:00A" on the right.

OFF 06:00A

< Power off screen >

A rectangular screen display showing a speaker icon with a slash through it on the left, a downward-pointing triangle on the right, and "07-04 10:12A" at the bottom.

07-04 10:12A

< Main screen >

Press and hold the Read button for 2 seconds while pager is in the Off mode.

Time and date will appear on the bottom center of the screen.

 
When inserting the battery, the pager will vibrate and beep briefly as it powers on.

If there are new unread messages, the **new** icon will appear. The number of unread messages will also be displayed on the screen. If all messages are read, the number of messages in memory will be displayed.


## 5. TURNING PAGER OFF



Press the Function button to enter the Function mode.  
Press the Function button 2 times until "POWER OFF?" is displayed on the screen.



Press READ to turn Pager Off .

 



Press the Read and Function buttons simultaneously to escape to the main screen.



## 6.
  
## RECEIVING AND READING

## MESSAGES




When a message is received, the selected Alert will be activated.

Press the Read button to stop the Alert and to read messages.


The following information will be displayed:

Message number, time stamp, message. Messages are displayed starting from newest to oldest.

Messages with more than 12 characters will display  at the top right corner of the screen. Press the Read button to view the rest of the message.

Press the Read and Function buttons simultaneously to escape to the main screen.

## 7. DUPLICATE MESSAGES

 

The duplicate Message Indicator will be displayed on the screen when the pager receives a message that is identical to a message in memory.

## 8. LOW BATTERY INDICATOR



When the battery voltage falls below operational level, the low battery icon will appear. The low battery alert will sound periodically until new battery is inserted.



0 123456789



LOCK ?



0 123456789



UNLOCK ?



0 123456789

A maximum of 14 messages can be locked. Select a message to be locked and press the Function button.

When "LOCK?" is displayed, press the Read button to lock the message. The Lock icon will be displayed, and the message will be locked.

To unlock messages, select the message to be unlocked and then press the Function button to display "UNLOCK?" on the screen. Press the Read button.

Locked messages will remain in memory during low battery power, while the battery is being replaced, and when message memory is full.

Press the Read and Function buttons simultaneously to return to the main screen.

The pager's memory capacity stores 30 numeric messages, with a maximum of 20 characters per message.



0 123456 789



dELETE?

### To Delete Individual Messages:

After reading message, press the Function button 2 times until "Delete?" is displayed on the screen.

Press the Read button. Message will be deleted and the next message is displayed.

### To Delete a Locked Message:

It is necessary to change a locked message to unlocked message before it can be deleted.

Press the Read and Function buttons simultaneously to return to the main screen.



DELETE ALL ?

To delete All Messages:

Press the Function button to enter the Function mode. To display "DELETE ALL?", press the Function button 2 times until the "DELETE ALL?" function appears onscreen. Press the Read button to delete all messages. Locked and Unread Messages will not be deleted.

Press the Read and Function buttons simultaneously to return to the main screen.

## 13. CHANGING ALERT STATUS

07-04 10:12A

SET ALERT ?

UIbE ?

bEEP 1234

MEL 12345678

ChIrP?

UIbE ChIrP?

SILENT ?

 
Press Function button once until "SET ALERT?" is displayed on the screen.

Press the Read button until the desired Alert appears onscreen.

Press the Function button to select alert and complete the process.

Press the Read and Function buttons simultaneously to return to the main screen.

## 14. ALARM



Press Function button 3 times until "SET ALARM?" is displayed on the screen.

Press Read button on "SET ALARM?" indicator to select an Alarm setting mode.



To choose and set desired condition, press Read button to toggle (Ex. YES ► NO).

To move to each field (hour, minute, am/pm), press the Function button.

Press the Read and Function buttons simultaneously to return to the main screen.



## 15. TIME AND DATE

  

Press Function button 4 times until "DATE-TIME?" is displayed on the screen.


Press the Read button to change to time or date, then press the Function button to move to the next field.

Press the Read Button and Function button simultaneously to move to the main screen.

## 16. **AUTOMATIC ON/OFF**



 Automatic On/Off is referred to on this pager as "AUTO ON\_OFF?" This feature allows you to specify a daily time period where the pager doesn't receive any messages.



Press Function button 5 times until "AUTO ON\_OFF?" is displayed on the screen.  
Press the Read button to change the on and off time settings.



Press Read button to change values.  
Press Function button to move to each field.



Press the Read and Function buttons simultaneously to return to the Main screen.

## 17. BACKLIGHT

Press the Function button for 2 seconds to turn the backlight on.  
Press the Function button for 2 seconds again to turn the backlight off.

## 18. BATTERY INFORMATION

The pager is designed to operate with a "AAA" size alkaline battery.  
Warning! Replace battery in Non-Hazardous location only.  
Use only Duracell Mn2400 & Energizer E92.

Note: Do NOT use carbon zinc batteries, or re-chargeable batteries.



# MEMO

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

**SUN TELECOM**  
*INTERNATIONAL*



# MEMO

---

---

---

---

---

---

---

---

---

---

---

**SUN TELECOM**  
*INTERNATIONAL*

# **FCC**

## **DECLARATION OF CONFORMITY**

PRODUCT NAME : Numeric Pager

MODEL NUMBER : AN1000F

FCC RULES : TESTED TO COMPLY WITH FCC PART 15, CLASS B

OPERATING ENVIRONMENT: FOR HOME OR OFFICE USE

### **FCC COMPLIANCE STATEMENT:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **INFORMATION TO USER:**

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient/Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
Consult the dealer or an experienced radio/TV technician for help.
- Substitution of components may impair intrinsic safety.

**Caution :** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

## **The party responsible for product compliance**

